

Bypass System Layouts

2-door system, clear opening

- ▣ T-guide location (floor mount)
- ▣ J-guide location (on back door)



1 standard hardware set, 1 track = 2× the door width, 1 bypass hardware set, 1 or 2 tracks = 3× the door width. Add connecting plate and wall mounting kit for second track if needed. Add bypass spacer kit(s) if needed.

4-door system, clear opening




2 standard hardware sets, 2 tracks = 2× the door width, 2 bypass hardware sets, 2 or 4 tracks = 3× the door width. Add connection plate and wall mounting kit for over 2 tracks if needed. Add bypass spacer kit if needed.

2-door system, pass-through opening




1 standard hardware set, 1 bypass hardware set, 2 tracks = 2× the door width. Add 1 extra T-guide and bypass spacer kit if needed.

4-door system, pass-through opening

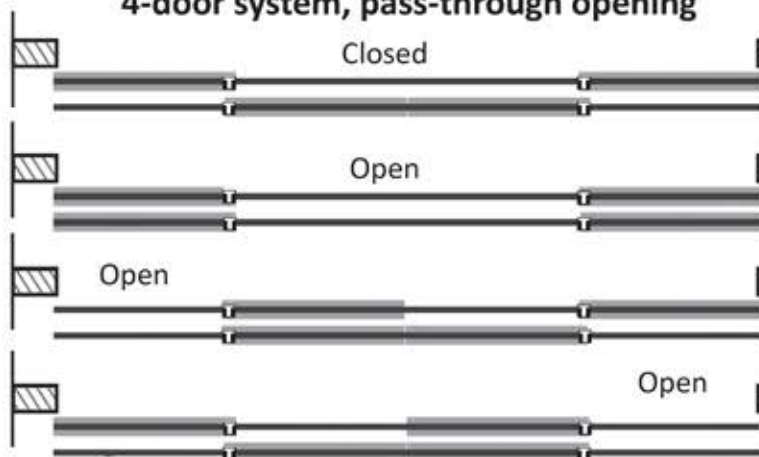

2 standard hardware sets, 2 bypass hardware sets, 4 tracks = 2× the door width. Add 2 extra T-guides and bypass spacer kits if needed.

3-door system, pass-through opening

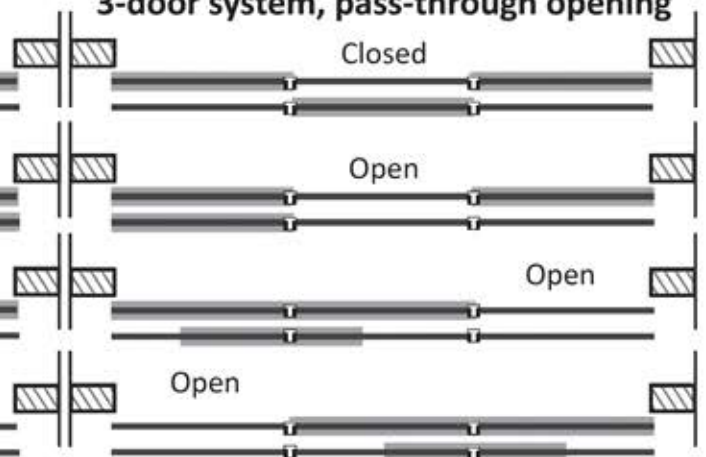

2 standard hardware sets, 1 bypass hardware set, 2 extra T-guides, 2 tracks = 3× the door width, 2 connecting plates, 1 wall mounting kit. Add bypass spacer kits if needed.