

GOLDBERG BROTHERS Barn Door Hardware

MP Series J-Strap - Installation Instructions

6008HJ-*

Included Hardware

J-strap hangers (2)
Anti-jump block screws (2)
Rubber bumper bands (2)

1/4" Carriage bolts (4)
Anti-jump blocks (2)
Track stops (2)


2 1/4" Carriage bolts (4)
Hex lag bolts (6)
Felt pads (2)

Kept Nuts (4)
1/2" Spacers (12)


T-guide (1)
1" Spacers (6)

T-guide screws (2)
Washers (6)

Basic Install Layouts

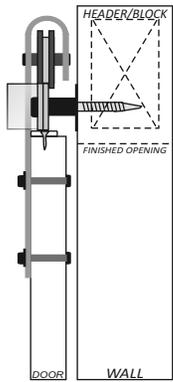

Standard hardware set installed with no casing, base, or other trim.

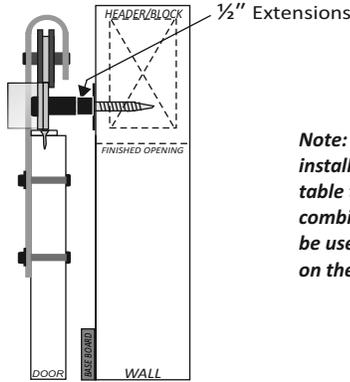



Standard hardware set + 1/2" or 1" extension kit installed where casing, base, or other trim is 1/2" thick or greater.

Note: Use the provided installation layouts and table to establish what combination of spacers will be used to install the track on the wall.

| Door Thickness | Extension | Spacer(s) |
|----------------|-----------|------------------|
| 1 3/8" | - | 1" |
| 1 3/8" | 1/2" | 1" + 1/2" |
| 1 3/8" | 1" | 1" + 1/2" + 1/2" |
| 1 3/4" | - | 1" + 1/2" |
| 1 3/4" | 1/2" | 1" + 1/2" + 1/2" |


Door Prep and Hanger Installation

2 1/4" from both sides of the top half of the door, measure down 1 1/2" and 4" and drill 1/8" pilot holes followed by 3/16" pilot holes.

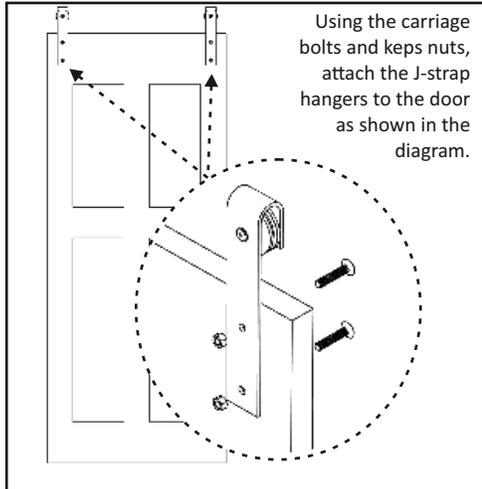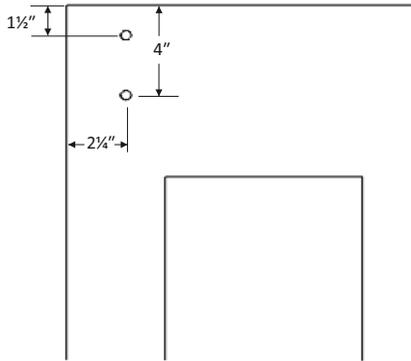


Using the carriage bolts and kept nuts, attach the J-strap hangers to the door as shown in the diagram.

T-guide Installation

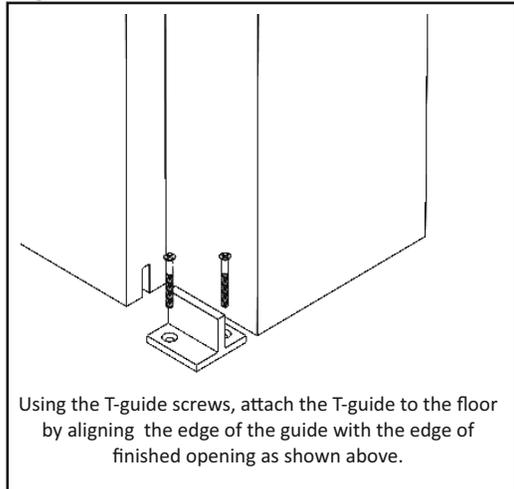

Using the T-guide screws, attach the T-guide to the floor by aligning the edge of the guide with the edge of finished opening as shown above.

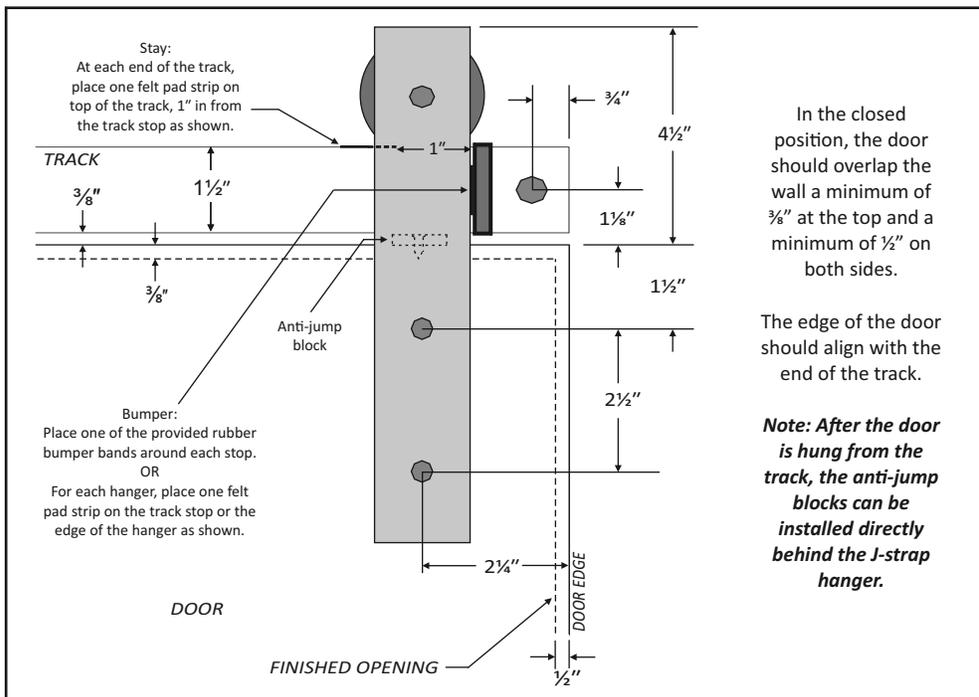

Stay:
At each end of the track, place one felt pad strip on top of the track, 1" in from the track stop as shown.

Bumper:
Place one of the provided rubber bumper bands around each stop.
OR
For each hanger, place one felt pad strip on the track stop or the edge of the hanger as shown.

3/8"

1 1/2"

3/8"

1"

3/4"

4 1/2"

1 1/4"

1 1/2"

2 1/2"

2 1/4"

1/2"

DOOR

FINISHED OPENING

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block

Bumper

Stay

TRACK

WALL

FINISHED OPENING

DOOR

DOOR EDGE

Anti-jump block






Bumper

Stay

TRACK

W

Track Installation

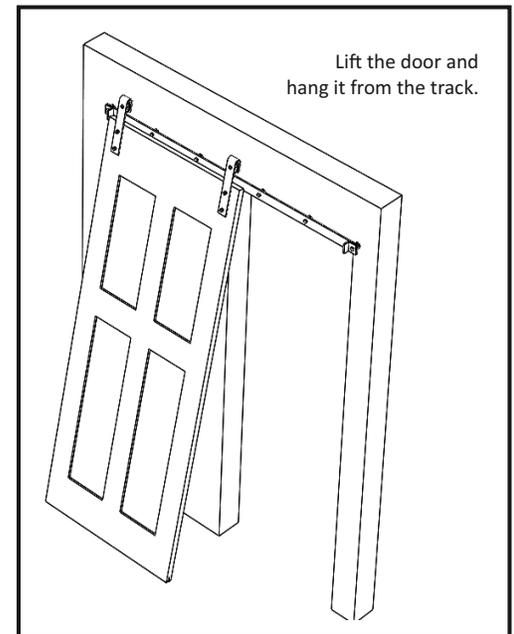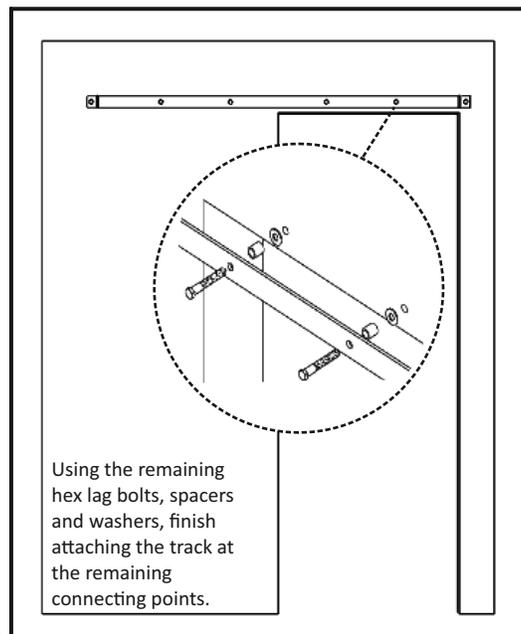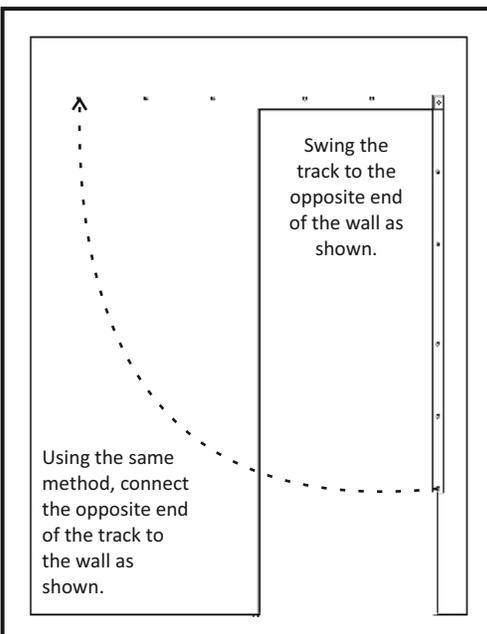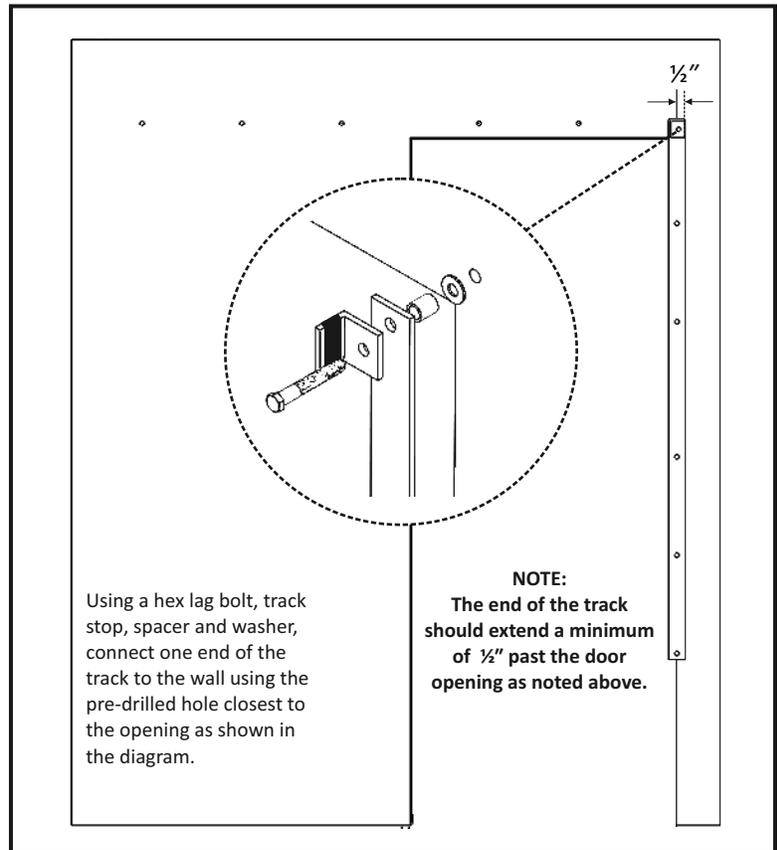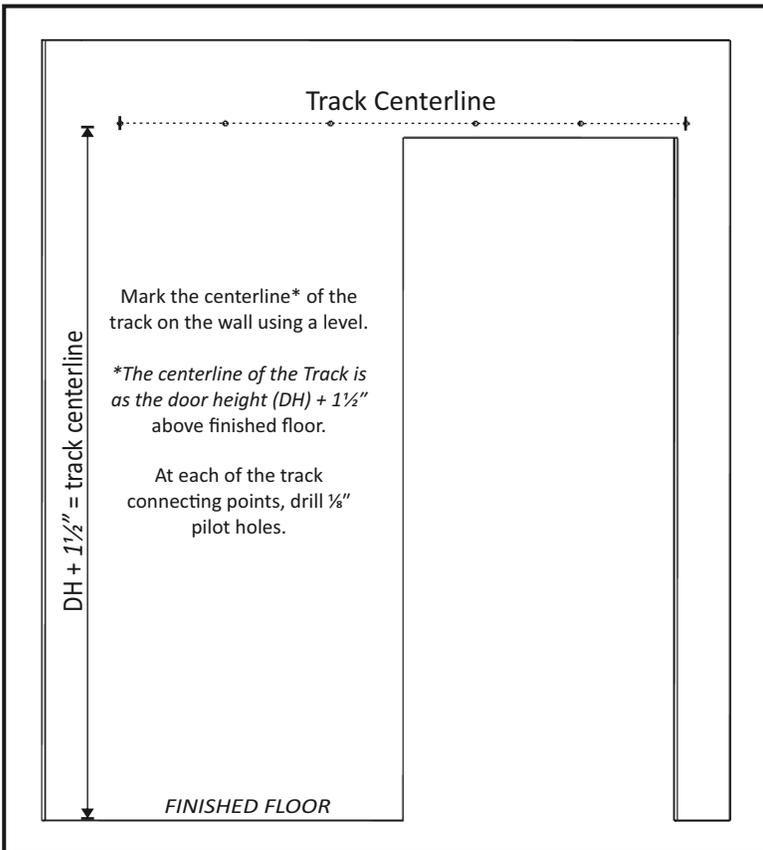

Optional Accessories

Track Connecting Plate
1 each
Part #6008C.*

Door U-guide
1 set
Includes 2 U-guides, 2 wood screws
and 1 felt pad
Part #6001U.*

NOTE: For U-guide installation use the T-guide screws provided in the hardware set.

Sidewall guide bracket
1 each
Includes 1 bracket,
4 machine screws, 4 nuts, and 1 felt pad
Part #6001SW.*

NOTE: Use the provided T-guide wood screws for sidewall guide installation.

MP Soft Stop
1 set
Includes 2 Soft Stop mechanisms,
2 triggers, 4 wood screws
Part #6008SOFT11 (4'-7" track)
Part #6008SOFT17 (8'+ track)

Goldberg Brothers, Inc.
10488 W Centennial Rd, Suite 100
Littleton, CO 80127
(303) 321-1099

* Indicates that the related part is available in various colors.